

NOTE: The following instructions are suggested options for installation. Manufacturer is only responsible for the parts that it ships and is not responsible for faulty installations. Labor claims will not be acknowledged. If you are not familiar with the processes listed below, please give us a call and/or seek the help of a professional automotive technician.

PACKAGE CONTENTS



Hardware (internal use):
4) HDW0070
10) HDW0074
4) HDW0076
2) HDW0078
10) DM00013A BLACK

LH & RH door panels, LH & RH carpet insert panels & 1 bag of installation hardware.

Hardware contents: 10) round dual locks, 2) plastic spacers, 4) "D" shaped spacers, 2) flat washers, 4) self-tapping screws 10) black trim screws

STEP 1




Use one of the provided self-tapping screws to mount a round dual lock on the back edge of the door shell as shown. This dual lock set-up is what will hold the top corner of the panel to the door frame.

Install the door panel on the door shell with your 2 factory screws at the armrest location. Mark the location of the hole needed for the rear self-tapping screw.

Remove panel & install screw with plastic spacer (if needed) and dual lock on the door shell. The plastic spacers may be required for proper locking since it will set the height of the round dual lock for proper adhesion to the white dual lock on the door panel. Each door shell is slightly different, the spacer may or not be required on your door.

STEP 2

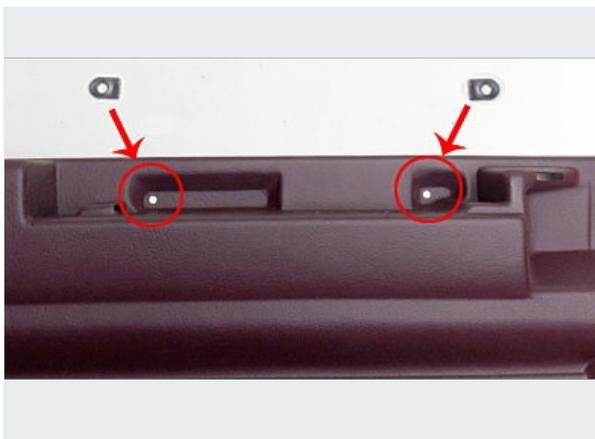

Begin final installation by attaching each panel with your factory screws behind each arm rest. Use the D-shaped support washers on each screw. These washers help to strengthen this area of each panel since much of the force of closing the door happens here.

STEP 3



With the screws behind the armrest loosely secured, locate the two holes along the bottom and front edge. Once you have the panel level with your door shell and upper door panel, install these two screws.

STEP 4



Beneath the carpet insert panel; install a dual-lock on each screw prior to their installation into your door shell as shown. These dual locks will be used to hold the carpet insert panel in place (you will see corresponding dual locks on the back of the insert panels).

STEP 5



Go around and evenly tighten each screw. Be careful not to over-tighten them to avoid deforming the plastic or stripping the holes in the door shell.

Install your armrest with the factory screws. These screws will thread directly into the plastic door panel.

STEP 6 ADMIRE YOUR WORK



Snap the carpet insert in place. These insert panels can be painted to match your door panel or carpeted like the factory.